



Problem 15 – Engine Will Not Crank When Utility Power Source Fails

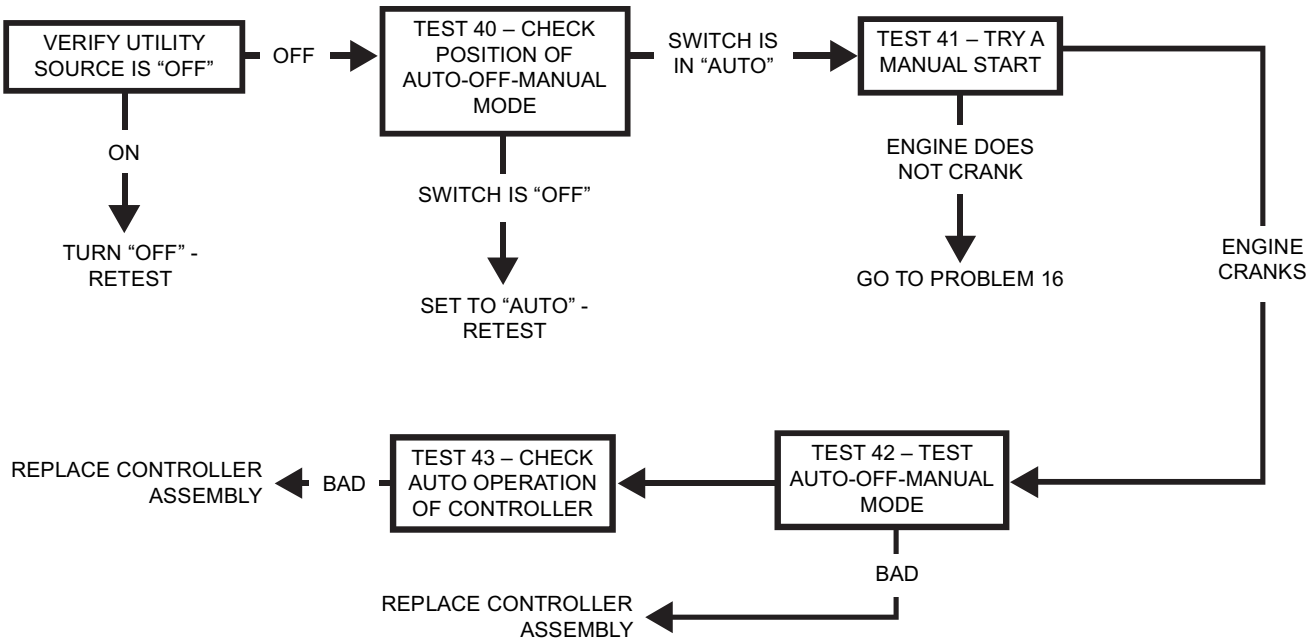

Problem 16 – Engine Will Not Crank When Controller Switch is Set to MANUAL or Controller Goes Dark and Reboots

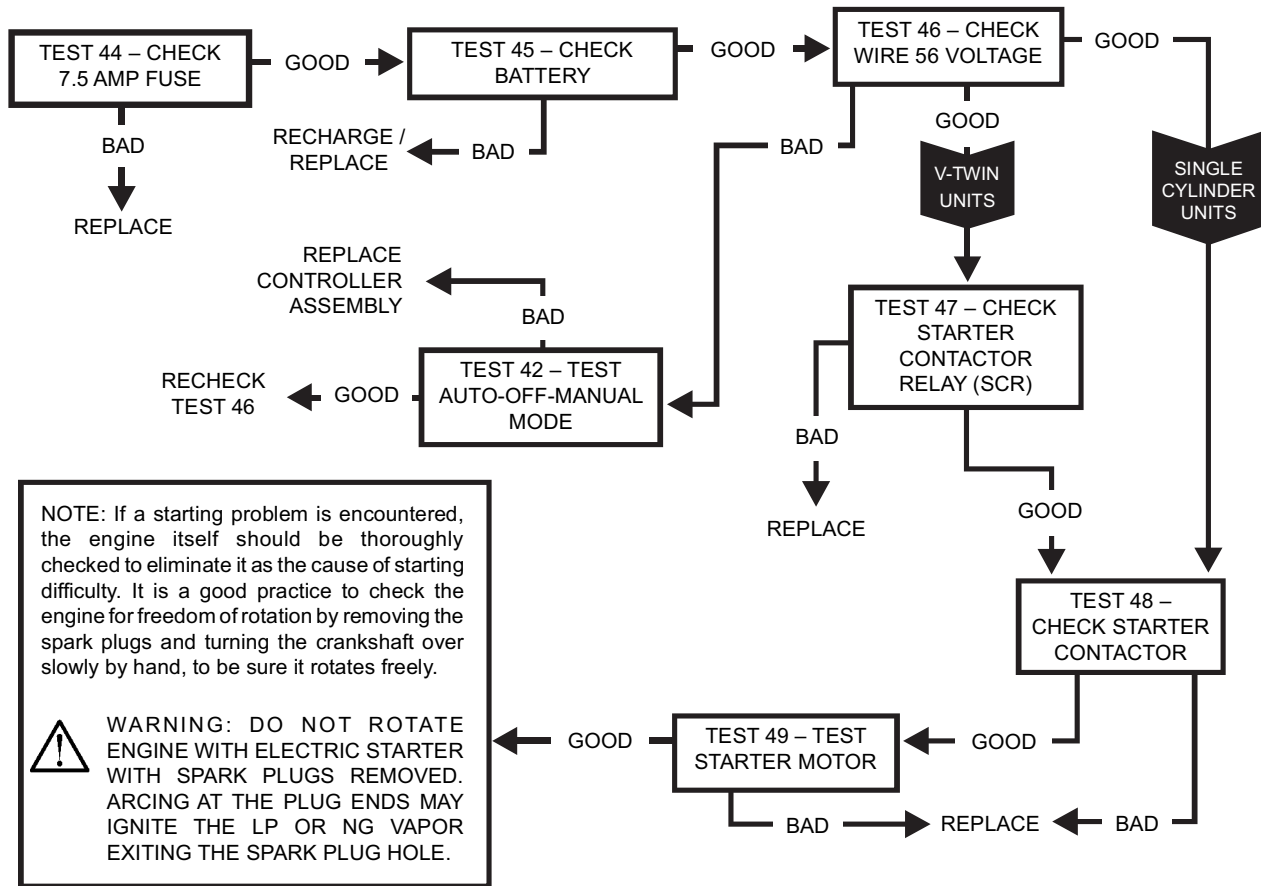

NOTE: If a starting problem is encountered, the engine itself should be thoroughly checked to eliminate it as the cause of starting difficulty. It is a good practice to check the engine for freedom of rotation by removing the spark plugs and turning the crankshaft over slowly by hand, to be sure it rotates freely.

WARNING: DO NOT ROTATE ENGINE WITH ELECTRIC STARTER WITH SPARK PLUGS REMOVED. ARCING AT THE PLUG ENDS MAY IGNITE THE LP OR NG VAPOR EXITING THE SPARK PLUG HOLE.

IMPORTANT NOTE: Clear any faults in the controller before proceeding with any running diagnostic steps!